

We touch your **electricity** everyday!

Sensitive Earth Fault Current Relay

## Hi-Tech Range IRI1-ES



UNDER  
FREQUENCY  
PROTECTION

OVER  
FREQUENCY  
PROTECTION

SUITABLE  
FOR LOAD  
SHEDDING

INDEPENDENT  
SEPARATE  
ADJUSTABLE  
TIMER

## Contents

<b>1. Summary</b>	<b>8. Relay testing and commissioning</b>
<b>2. Applications</b>	8.1 Power On
<b>3. Characteristics and features</b>	8.2 Checking the set values
<b>4. Design</b>	8.3 Secondary injection test
4.1 Connections	8.4 Primary injection test
4.2 Front plate	8.5 Maintenance
<b>5. Working principle</b>	<b>9. Technical Data</b>
<b>6. Operations and settings</b>	9.1 Measuring input
6.1 Setting of the pick-up value for the earth fault current $I_E$	9.2 Auxiliary voltage
6.2 Trip delay $t_E$	9.3 General data
6.3 Setting for Auto/Manual RESET mode	9.4 Output relay
6.4 Reset	9.5 System data
<b>7. Housing</b>	9.6 Setting ranges and steps
7.1 Individual housing	9.7 Dimensional drawing
7.2 Rack mounting	<b>10. Order form</b>
7.3 Terminal connections	

## 1. Summary

When compared with traditional protection systems the protective relaying with MR- and IR- relays of our HIGH-TECH RANGE offers several advantages.

All MR protection relays are based on microprocessor technology. They present the generation of our most efficient protection relays, because of their capabilities to process the measuring values digitally and to perform arithmetical and logical operation. Additional advantages such as very low power consumption, adaptability, possibilities for self-supervision, flexible construction, selection of relay characteristics are completely utilized.

Some IR protection relays are based on microprocessor and some like the IRI1-ES on analog technology. They present our low-priced protection relay generation and are used for all basic protection application.

The following properties of the IR protection relays such as : Integration of multiple protection functions into one compact housing,

User-friendly setting procedure by means of DIP-switches,

Compact design due to SMD-technique, are their superiority over the traditional protection systems.

For all applications of a more complex nature, e.g. directional earth fault detection and where operating convenience, fault analysis and communication ability are required, MR-relays are used.

All relays of the HIGH-TECH RANGE are available for through panel mounting and in 19" racks. Connection terminals are of plug-in type. All IEC/DIN regulations required for the individual application are reliably met by these relays.

## 2. Application

The sensitive earth fault relay IRI1-ES detects high impedance earth faults with very small currents.

Conventional earth fault relays (IDMT) do not provide the required sensitivity.

For this application the IRI1-ES is the optimal solution.

## 3. Characteristics and features

Static protective device

Earth fault detection with core balance C.T. or in Holmgreen circuit

Low pass filter for suppression of harmonics

Coding for the self-holding function or automatic reset of the LED's and trip relays

Frequency range 50/60 Hz

Rated current 1A or 5A

Output relay with 2 change-over contacts

Extremely large setting range for current reaction value with fine grading

Wide range of operation of the supply voltage (AC/DC)

## 4.1.1 Current measuring input

The analog input signal of the earth fault current is fed to the terminals B1/B2 of the protection relay.

## 4.1.2 Output relay

The IRI1-ES has one output relay with two change-over contacts :

State of IRI1-ES	Contact terminals closed :
Normal operation pickup and dead condition	D1-C1, D2-C2
Trip	D1-E1, D2-E2

## 4. Design

### 4.1 Connections

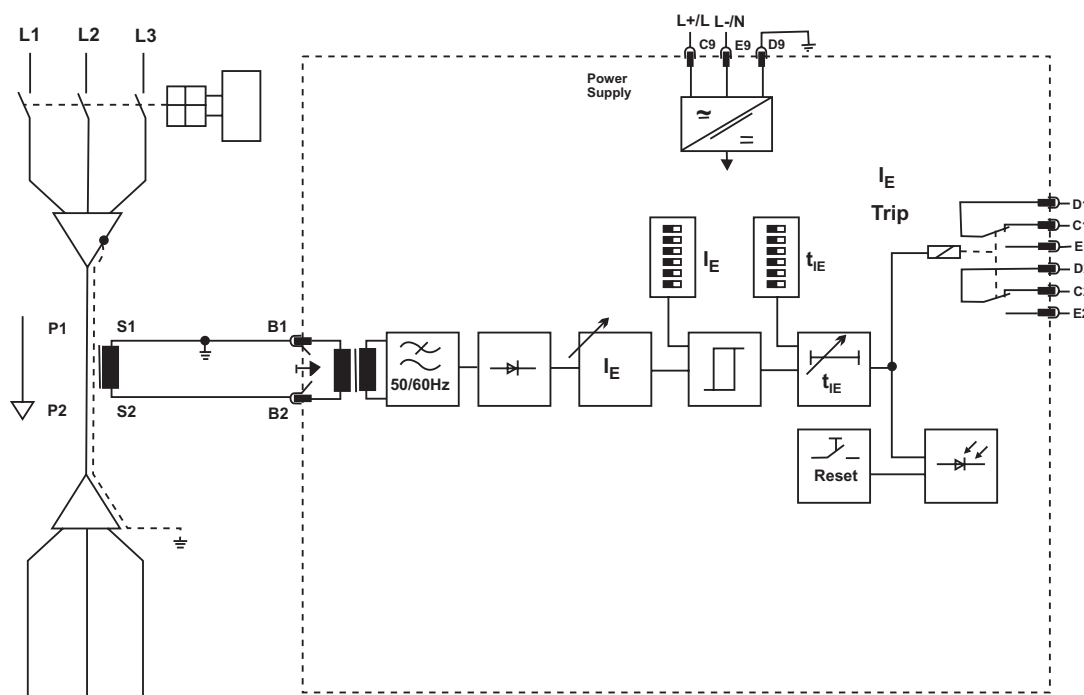


Fig. 4.1 : Connection diagram of IRI1-ES

## 4.2 Front plate

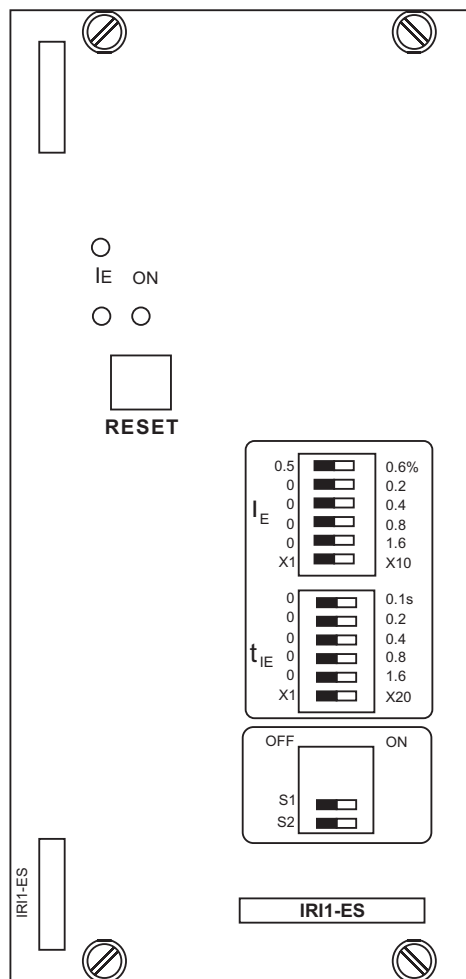


Fig. 4.2 : Front plate

The front plate of the IRI1-ES comprises the following operation and indication elements :

- 2 sets of DIP-switches for setting the current pickup value and the trip delay
- 3 LEDs for indication of faults and readiness for operation
- 1 <RESET> push button

### 4.2.1 LEDs

On the front plate of the IRI1-ES LEDs are installed, signaling the following 2 service conditions :

- LED ON (green): readiness for service
- LED  $I_E$  (yellow): pickup
- LED  $I_E$  (red): tripping

### 4.2.2 DIP-switches

The set of DIP-switches on the front plate serves for setting the tripping value for the earth fault current  $I_E$  and the trip delay  $t_{IE}$ .

### 4.2.3 <RESET> push button

The <RESET> push button is used for acknowledgement and reset of the LED and the tripping relay after tripping at the specifically presetting.

## 5. Working principle

The earth fault protection relay IRI1-ES can be connected into the differential path of the C.T.s in a Holgreen circuit or connected to a core balance C.T.

The analog measuring current is galvanically isolated and then fed to a low pass filter to suppress harmonics. Thereafter the signal is rectified and fed to a comparator where it is continuously compared with the preset threshold. If the measuring current exceeds a preset pickup value, the relay trips after the set trip delay has elapsed (see 4.1).

6. Operations and settings

6.1 Setting of the pickup value for the earth fault current  $I_E$

The pick-up value of the earth fault current element  $I_E$  can be set by means of the DIP-switches  $set_E$  in the range of 0.5% to 36% x  $I_N$  with a grading of 0.1%.

The pick-up value is calculated by adding up the values of all DIP-switches.

Example :  
A pick-up value of 10% of the rated current is required.

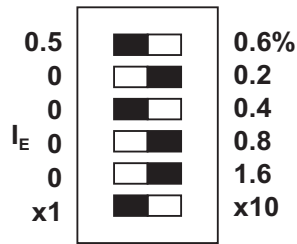


Fig. 6.1 : Setting example for the earth fault current pickup value

6.2 Trip delay  $t_E$

The of the earth fault element can be set by means of the DIP-switches  $set_t$  in the range of 2.0 s to 62 s with a grading of 0.1 s or 0.2 s.

The trip delay is calculated by adding up the values of all DIP-switches.

Example :  
A trip delay of 2.5 s is required.


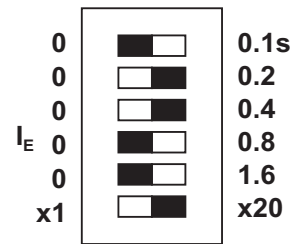


Fig. 6.2 : Setting example for the trip delay

6.3 Setting for Auto/Manual RESET mode

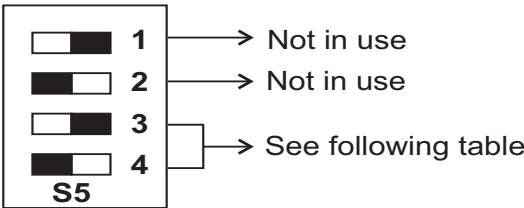

Dip-switches S5		Function	Reset
3	ON	Earth fault indication	auto
	OFF	LED	manual
4	ON	Earth fault trip relay	auto
	OFF		manual

6.4 Reset

Dependent on the auto / manual reset DIP-switch (see 6.3) the relay can be reset manually by the <RESET> pushbutton. If the function is coded for automatic reset, the LED extinguishes and the output relay releases automatically after fault clearance.

## 7. Housing

The IRI1-ES can be supplied in an individual housing for flush-mounting or as a plug-in module for installation in a 19" mounting rack according to DIN 41494. Both versions have plug-in connections.

Relays of variant D are complete devices for flush mounting, whereas relays of variant A are used for 19" rack mounting. Housing variant A to be installed in switchboards of protection class IP51. For switchboards of lower protection classes housing variant D can be used.

### 7.1 Individual housing

The individual housing of the IRI1-ESs constructed for flush-mounting. The dimensions of the mounting frame correspond to the requirements of DIN 43700 (76 x 142 mm). The cut-out for mounting is 68.7 x 136.5 mm.

The front of the IRI1-ES is covered with a transparent, sealable flap (IP54).

For case dimensions and cut-out refer to "Technical data". The individual housing is fixed with the supplied clasps from the rear of the switchboard panel.

### 7.2 Rack mounting

The IRI1-ESs in general suitable for installation in a modular carrier according to DIN 41494. The installation dimensions are: 12 TE; 3 HE.

According to requirements, the IRI1-ES devices can be delivered mounted in 19" racks.

### 7.3 Terminal connections

The plug-in module has very compact base with plug connectors and screwed-type connectors.

max. 15 poles screw-type terminals for voltage and current circuits (terminal connectors series A and B with a short time current capability of 500 A / 1 s).

27 poles tab terminals for relay outputs, supply voltage etc. (terminal connectors series C, D and E, max. 6 A current carrying capacity). Connection with tabs 6.3 x 0.8 mm for cable up to max. 1.5 mm<sup>2</sup> or with tabs 2.8 x 0.8 mm for cable up to max. 1 mm<sup>2</sup>.

By using 2.8 x 0.8 mm tabs a bridge connection between different poles is possible.

The current terminals are equipped with self-closing short-circuit contacts. Thus, the IRI1-ES module can be unplugged even with current flowing, without endangering the current transformers connected.

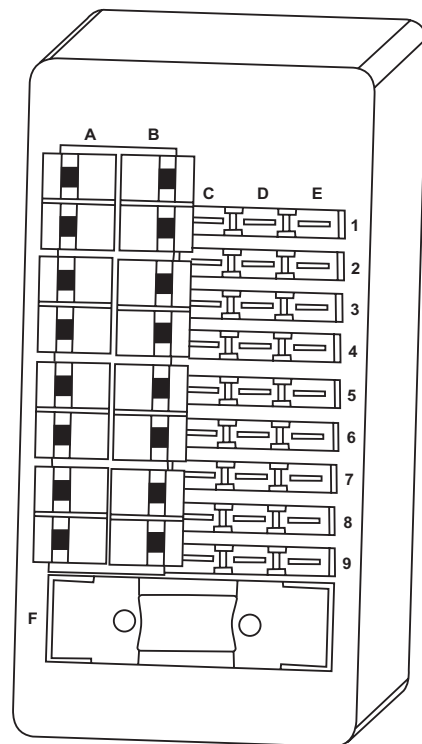


Fig. 7.1: Terminal block of IRI1-ES

## 8. Relay testing and commissioning

The following instructions should help to verify the protection relay performance before or during commissioning of the protection system. To avoid a relay damage and to ensure a correct relay operation, be sure that:

- the auxiliary power supply rating corresponds to the auxiliary voltage on site
- the rated current and rated voltage of the relay correspond to the plant data on site
- the current transformer circuits are connected to the relay correctly
- all signal circuits and output relay circuits are connected correctly

### 8.1 Power On

#### NOTE!

Prior to switch on the auxiliary power supply, be sure that the auxiliary supply voltage corresponds with the rated data on the type plate.

Switch on the auxiliary power supply to the relay (terminal C9/E9) and check that the LED "ON" on the front plate lights up green.

## 8.2 Checking the set values

Check all relay set values and see if they are set correctly as you have desired. Set values can be modified by means of the DIP-switches on the front.

## 8.3 Secondary injection test

### 8.3.1 Test equipment

Ammeter with class 1 or better

Auxiliary power supply with the voltage corresponding to the rated data on the type plate

Single-phase current supply unit (adjustable from 0 to  $1.0 \times I_N$ )

Timer to measure the operating time (Accuracy  $\pm 10$  ms)

Switching device

Test leads and tools

### 8.3.2 Example of a test circuit for IRI1-ES relay

For testing the IRI1-3ES relays, only current input signals are required. Figure 8.1 shows a simple example of a single phase test circuit with adjustable current energizing the IRI1-ES relay under test.

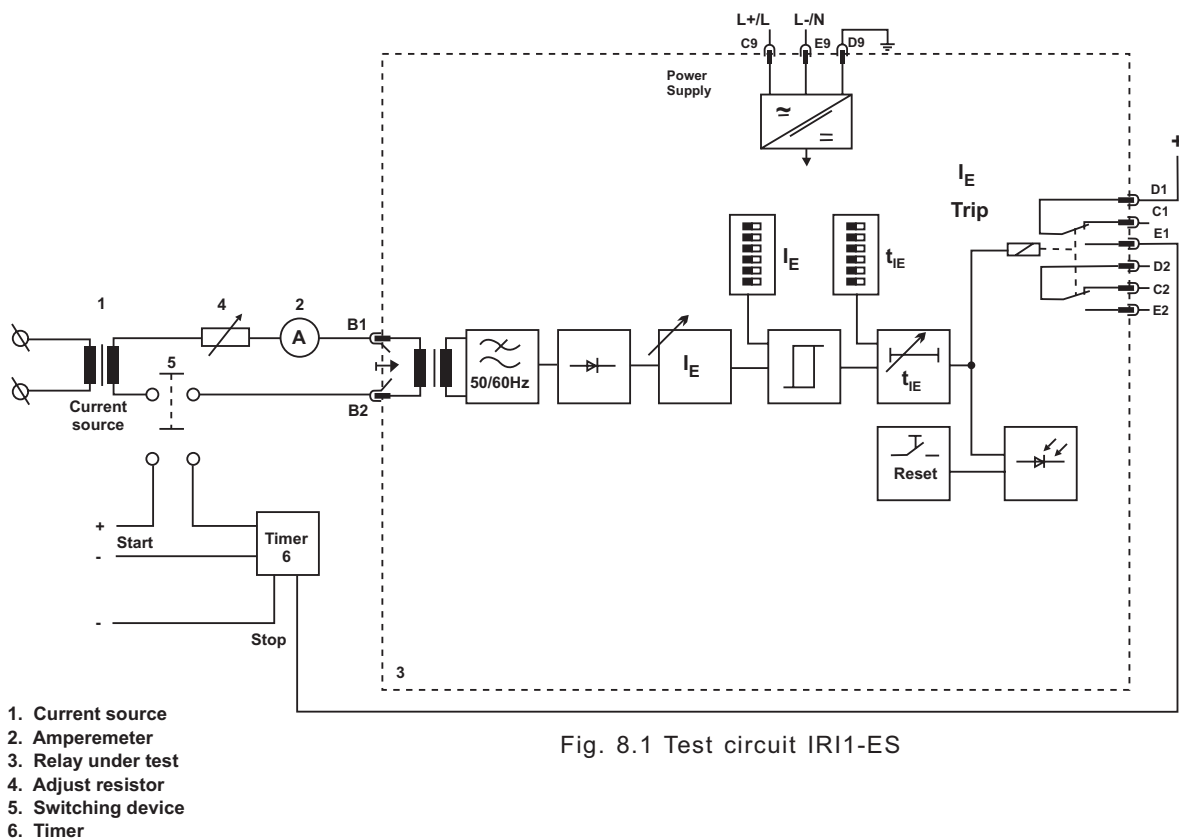


Fig. 8.1 Test circuit IRI1-ES

### 8.3.3 Checking the pick-up and tripping values

With the IRI1-ES the analog input signal of the singlephase testing AC must be supplied to the relay via the terminals B1/B2 for checking the pick-up value  $I_E$ .

For testing the differential current pick-up value, first the testing AC must be set below the set pickup value  $I_E$ . Then the testing AC is increased gradually, until the relay picks up. This is indicated by the LED  $J$  lighting up yellow at the same time. Check that the value shown at the ammeter does not deviate by more than  $\pm 5\%$  from the set pickup value  $I_E$ .

The resetting value of the earth fault element is determined, by slowly decreasing the testing AC, until the output relay  $I_E$  releases. The LED  $J$  extinguishes (supposed the respective coding was effected).

Check that the resetting value is greater than 0.95 times the pick up value.

### 8.3.4 Checking the trip delay $t_{IE}$

To check the trip relay, a timer must be connected to the trip output relay contact. The timer should be started simultaneously with the current injection into the current input circuit and stopped by the trip relay contact. Set the current to a value corresponding to twice the operating value and inject the current instantaneously. The operating time measured by the timer should have a deviation of less than  $\pm 3\%$  of the set value or  $\pm 20$  ms.

### 8.4 Primary injection test

Generally, a primary injection test could be carried out in the similar manner as the secondary injection test described above. With the difference that the protected power system should be, in this case, connected to the installed relays under test "on line", and the test currents and voltages should be injected to the relay through the current and voltage transformers with the primary side energized. Since the cost and potential hazards are very high for such a test, primary injection tests are usually limited to very important protective relays in the power system.

### 8.5 Maintenance

Maintenance testing is generally done on site at regular intervals. These intervals may vary among users depending on many factors: e.g. type of protective relays employed; the importance of the primary equipment being protected; the user's past experience with the relay, etc.

For static relays such as the IRI1-ES, maintenance testing once per year is sufficient, as experience has shown.



## 9. Technical Data

### 9.1 Measuring input

Rated data:

Nominal current $I_N$	:	1A/5A	
Nominal frequency $f_N$	:	50/60 Hz	
Power consumption in current circuit	:	<1 VA/at $I_N = 1A$ <5 VA/at $I_N = 5 A$	
Thermal withstand capability of current circuit	:	dynamic current withstand (half-wave)	$250 \times I_N$
	:	for 1 s	$100 \times I_N$
	:	for 10 s	$30 \times I_N$
	:	continuously	$4 \times I_N$

### 9.2 Auxiliary voltage

Rated auxiliary voltage  $U_H$  :

24 V - working range	:	16 - 60 V AC / 16 - 80 V DC
110 V - working range	:	50 - 270 V AC / 70 - 360 V DC

Power consumption:

24 V - working range	:	standby approx. 3 W	operating approx. 6 W
110 V - working range	:	standby approx. 3 W	operating approx. 6 W

### 9.3 General data

Permissible interruption of the supply voltage without influence on the function

: 50 ms

Dropout to pickup ratio

: >95%

Returning time

: 30 ms

Minimum operating time

: 30 ms

### 9.4 Output relay

The output relay has the following characteristics:

Maximum breaking capacity : 250 V AC / 1500 VA / continuous current 6 A

Breaking capacity for DC:

	Ohmic	L/R = 40 ms	L/R = 70 ms
300 V DC	0.3 A / 90 W	0.2 A / 63 W	0.18 A / 54 W
250 V DC	0.4 A / 100 W	0.3 A / 70 W	0.15 A / 40 W
110 V DC	0.5 A / 55 W	0.4 A / 40 W	0.20 A / 22 W
60 V DC	0.7 A / 42 W	0.5 A / 30 W	0.30 A / 17 W
24 V DC	6.0 A / 144 W	4.2 A / 100 W	2.50 A / 60 W

Max. rated making current : 64 A (acc. VDE 0435/0972 and IEC 65 / VDE 0860 / 8.86)

Making current : minimum 20 A (16ms)

Mechanical life span :  $30 \times 10^6$  switching cycles

Electrical life span :  $2 \times 10^5$  switching cycles at 220 V AC / 6 A

Contact material : silver-cadmium-oxide

## 9.5 System data

Design standard :	
Generic standard :	EN 50082-2, EN 50081-1
Product standard :	EN 60255-6, IEC 255-4, BS 142
Specified ambient service	
Storage temperature range:	- 40°C to + 85°C
Operating temperature range:	- 20°C to + 70°C
Environmental protection	
class F as per DIN 40040	
and per DIN IEC 68 2-3 :	relative humidity 95 % at 40°C for 56 days
Insulation test voltage, inputs	
and outputs between themselves	
and to the relay frame as per	
EN 60255-6 and IEC 255-5 :	2.5 kV (eff.), 50 Hz; 1 min.
Impulse test voltage, inputs	
and outputs between themselves	
and to the relay frame as per	
EN 60255-6 and IEC 255-5 :	5 kV; 1.2 / 50 µs; 0.5 J
High frequency interference test	
voltage, inputs and outputs between	
themselves and to the relay frame	
as per EN 60255-6 and IEC 255-22-1 :	2.5 kV / 1MHz
Electrostatic discharge (ESD) test as per	
EN 61000-4-2 and IEC 255-22-1 :	8 kV air discharge, 6 kV contact discharge
Electrical fast transient (Burst) test as	
per EN 61000-4-8 and IEC 801-4 :	4 kV / 2.5 kHz, 15 ms
Power frequency magnetic field	
test as per ENV 50141 :	electric field strength 10 V/m
Surge immunity EN 61000-4-5 :	4 kV
Radio interference suppression	
test as per EN 55011 :	limit value class B
Radio interference radiation test	
as per EN 55011 :	limit value class B
Mechanical tests:	
Shock :	class 1 acc. to DIN IEC 255-21-2
Vibration :	class 1 acc. to DIN IEC 255-21-1
Degree of protection - front of relay :	IP 54 by enclosure of the relay case and front panel (relay version D)
Weight :	approx. 1.5 kg
Degree of pollution :	2 by using housing type A 3 by using housing type D
Overvoltage class :	III


Influence variable values:

Frequency influence	:	40 Hz < f < 70 Hz: <3 % of set value
Temperature influence	:	-20°C to + 70 °C
Auxiliary voltage influence	:	no influence within the admissible range
GL-Approbation	:	99324-97 HH

## 9.6 Setting ranges and steps

Parameter	Setting range	Steps	Tolerances
$I_E$	0.5 % ... 3.6 % x $I_N$	0.1 %	± 5 % of set value
	5.0 % ... 36 % x $I_N$	1.0 %	
$t_{IE}$	0.1 s ... 3.1 s	0.1 s	± 3 % bzw ±20 ms
	2.0 s ... 62 s	2.0 s	

## 9.7 Dimensional drawing

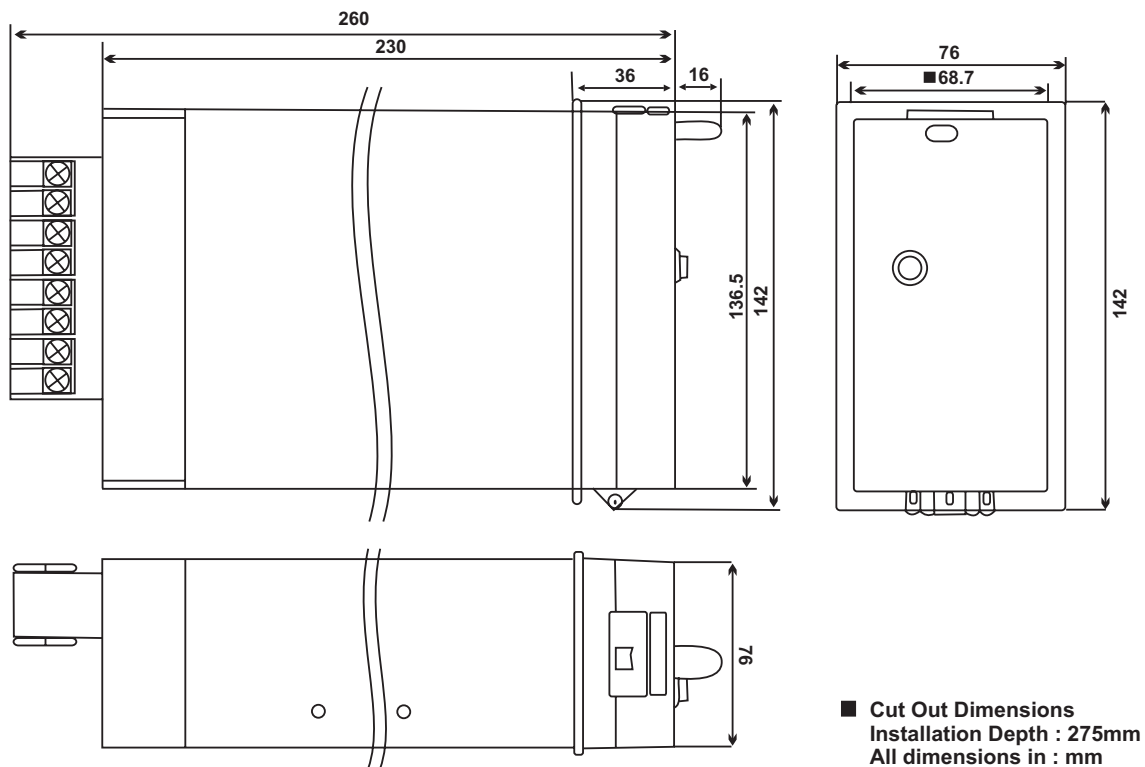

### Please note:

A distance of 50 mm is necessary when the units are mounted one below the other in order to allow easy opening of the front cover of the housing. The front cover opens downwards.

## 10. Order form

<b>IRI1-ES</b>	—	<b>X</b>	—	<b>X</b>	—	<b>X</b>
----------------	---	----------	---	----------	---	----------

**RATED CURRENT**

**1** : Rated 1 Amp

**5** : Rated 5 Amp

**AUXILIARY VOLTAGE**

**L** : 24V (16-60V AC/16-80V DC)

**H** : 110V (50-270V AC/70-360V DC)

**HOUSING (12TE)**

**A** : 19" Rack

**D** : Flush mounting

Technical data subject to change without notice.

## Setting list IRI1-ES

Note!

All settings must be checked at site and should the occasion arise, adjusted to the object / item to be protected.

Project : \_\_\_\_\_ CSE job no. : \_\_\_\_\_

Function group : ≡ \_\_\_\_\_ Location : + \_\_\_\_\_ Relay code : \_\_\_\_\_

Relay functions : \_\_\_\_\_

## Setting of parameters

Parameter		Unit	Default settings	Actual settings
$I_E$	Earth fault current	% $I_n$	0.5	
$t_E$	Tripping delay $I_E$	s	0.1	

[illegible]

The content in this document are not binding and is for general information.  
C&S reserves the right to change the design, content or specification contained in this without prior notice.

**1800 572 2012**

Branch	Phone	Fax	E-mail
Ahmedabad:	+91-79-615651 22/23/24	+91-79-61565130	ahmedabad@cselectric.co.in
Bangalore:	+91-80-305703 72/73, 30570347	+91 2558 4839	bangalore@cselectric.co.in
Bhubaneswar:	+91-674-2507265	+91 674 2507265	bhubaneswar@cselectric.co.in
Chennai:	+91-44-33534501,33534521-23	----	chennai@cselectric.co.in
Cochin:	+91-484-3071717	+91 0484 3071716	cochin@cselectric.co.in
Delhi:	+91-11-338490 00/10/11	+91 11 30838826	delhi@cselectric.co.in
Hyderabad:	+91-40-485340 80/82	----	hyderabad@cselectric.co.in
Kolkata:	+91-33-392121 19-21	----	----
Mumbai:	+91-22-241147 27/28	----	cspc.mumbai@cselectric.co.in
Pune:	+91-20-242505 18/19	+91 20 30283244	pune@cselectric.co.in

We touch your electricity everyday!